


MOJOTONE CUSTOM 100 WIRING DIAGRAM

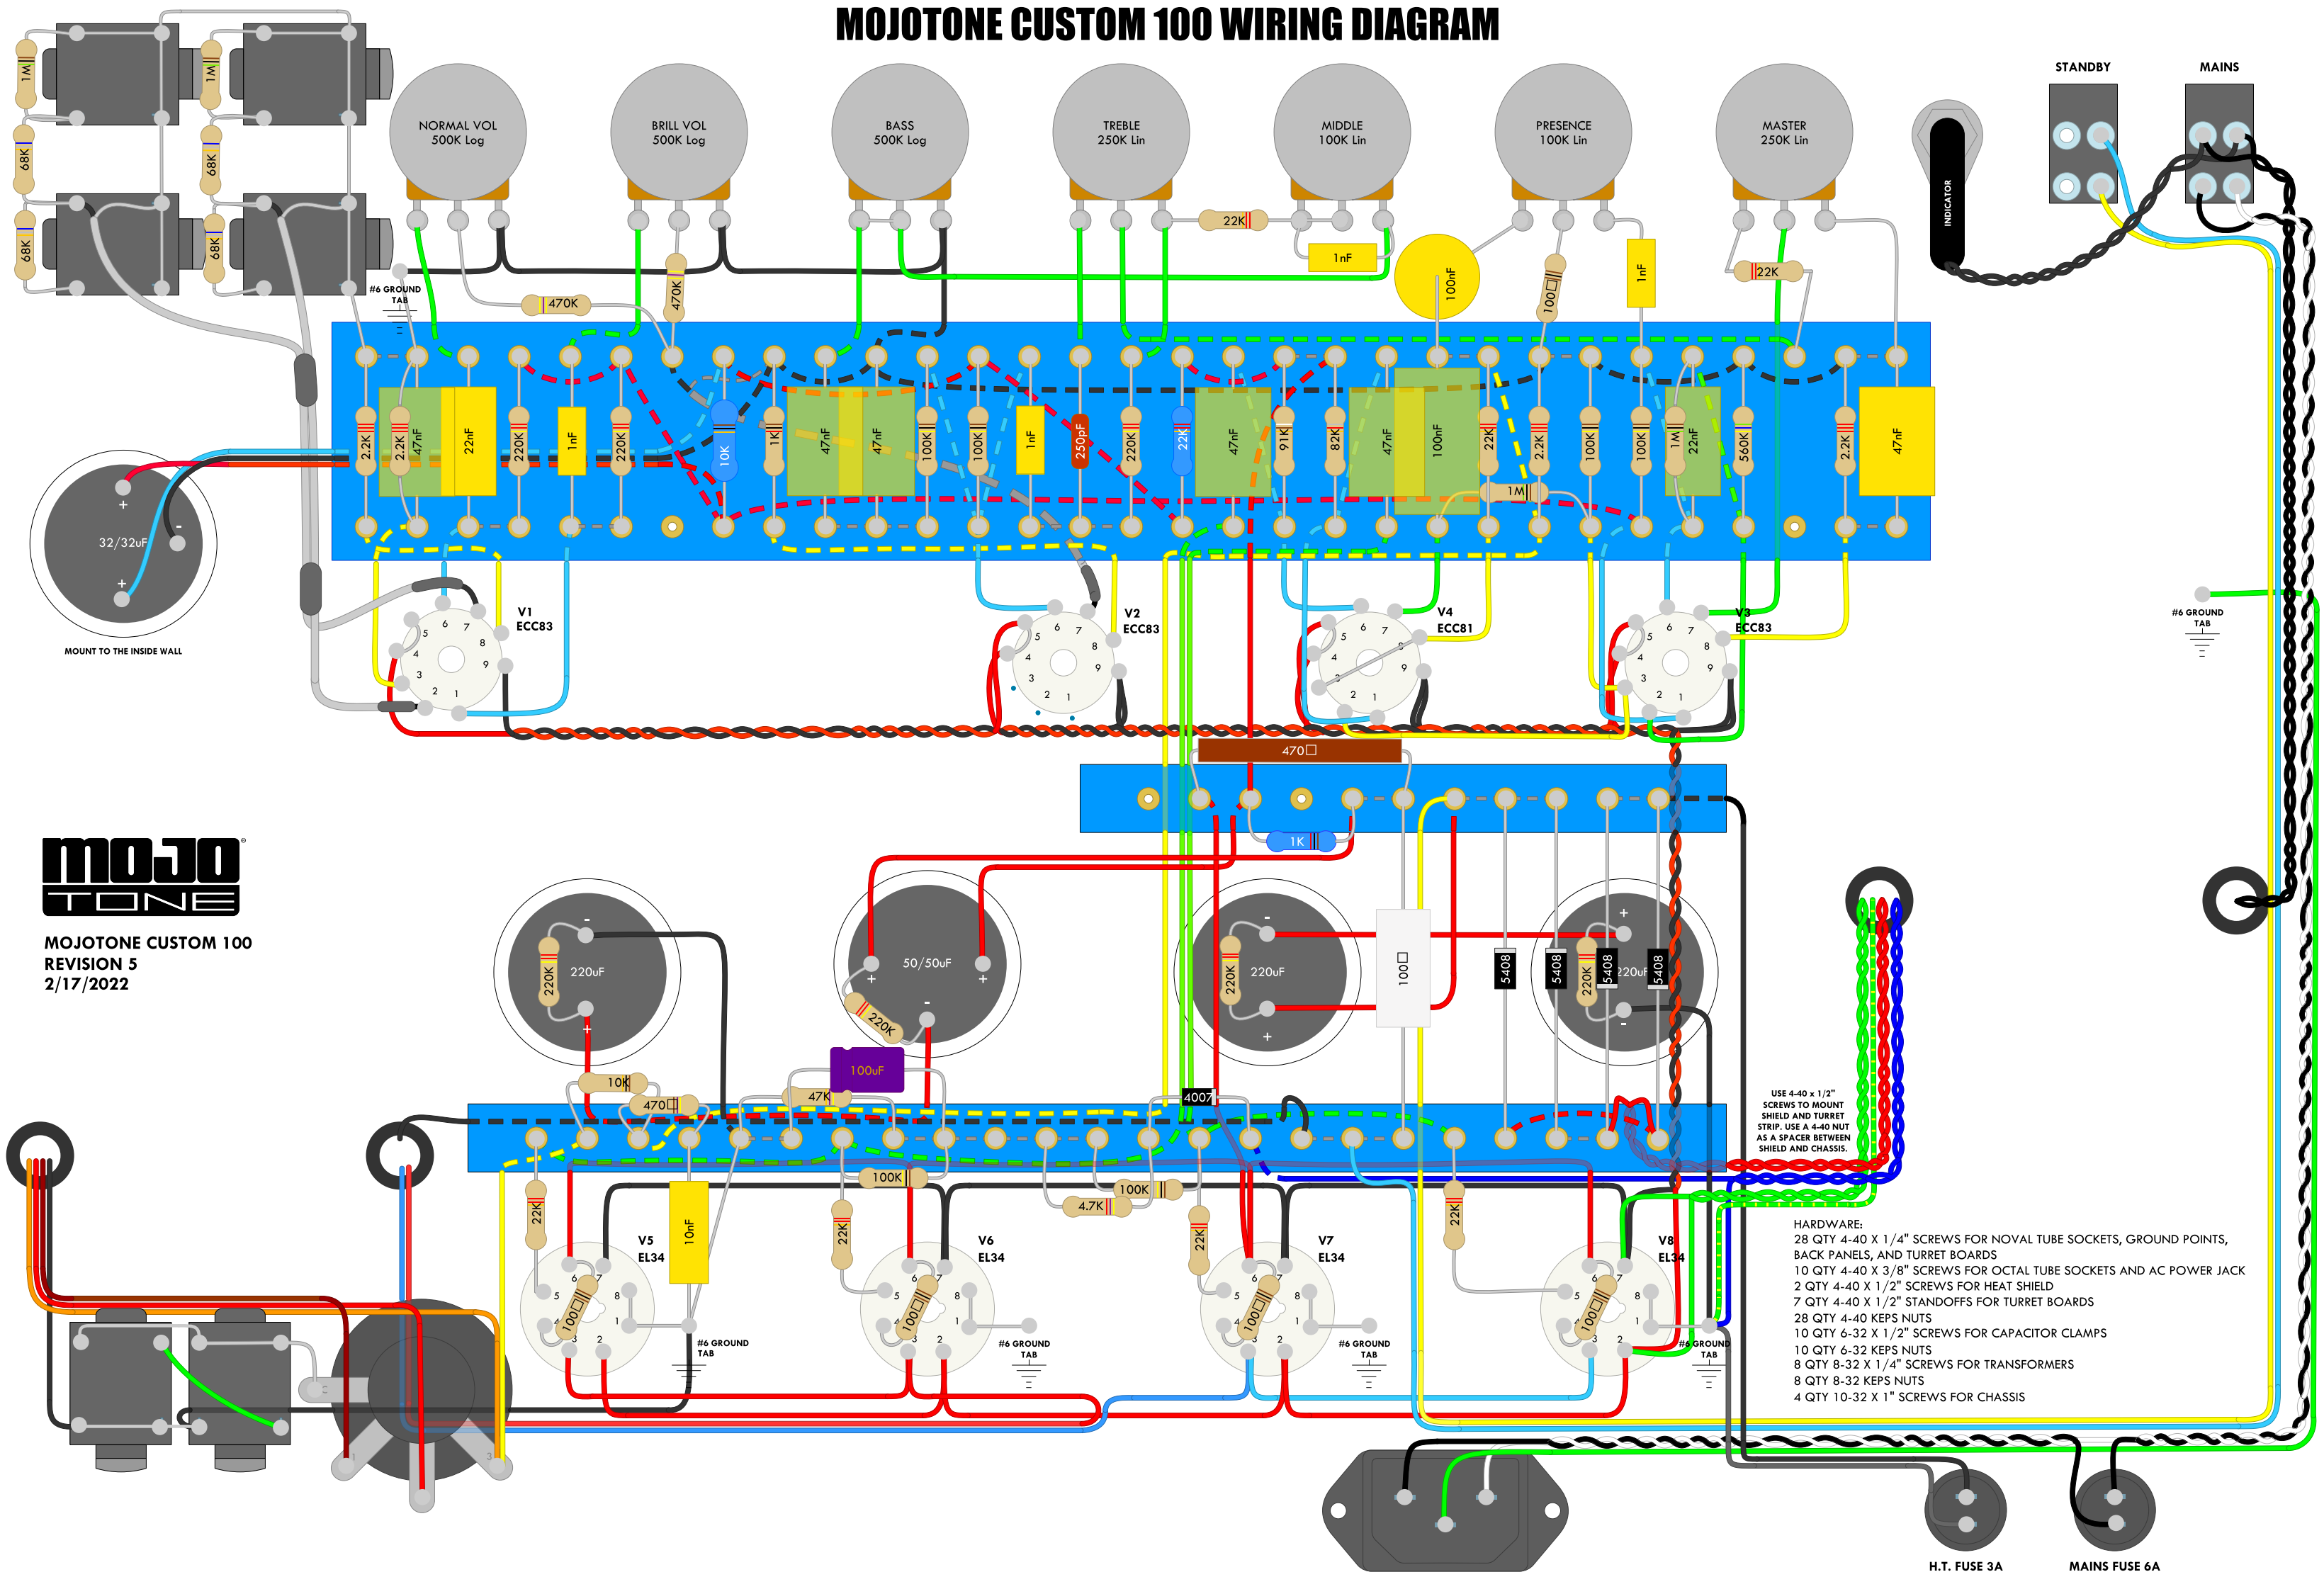

MOJO TONE
 MOJOTONE CUSTOM 100
 REVISION 5
 2/17/2022

- USE 4-40 x 1/2" SCREWS TO MOUNT SHIELD AND TURRET STRIP. USE A 4-40 NUT AS A SPACER BETWEEN SHIELD AND CHASSIS.
- HARDWARE:**
 28 QTY 4-40 X 1/4" SCREWS FOR NOVAL TUBE SOCKETS, GROUND POINTS, BACK PANELS, AND TURRET BOARDS
 10 QTY 4-40 X 3/8" SCREWS FOR OCTAL TUBE SOCKETS AND AC POWER JACK
 2 QTY 4-40 X 1/2" SCREWS FOR HEAT SHIELD
 7 QTY 4-40 X 1/2" STANDOFFS FOR TURRET BOARDS
 28 QTY 4-40 KEPS NUTS
 10 QTY 6-32 X 1/2" SCREWS FOR CAPACITOR CLAMPS
 10 QTY 6-32 KEPS NUTS
 8 QTY 8-32 X 1/4" SCREWS FOR TRANSFORMERS
 8 QTY 8-32 KEPS NUTS
 4 QTY 10-32 X 1" SCREWS FOR CHASSIS

H.T. FUSE 3A MAINS FUSE 6A