


STRAT 5-WAY BLENDER SOLDERLESS WIRING DIAGRAM

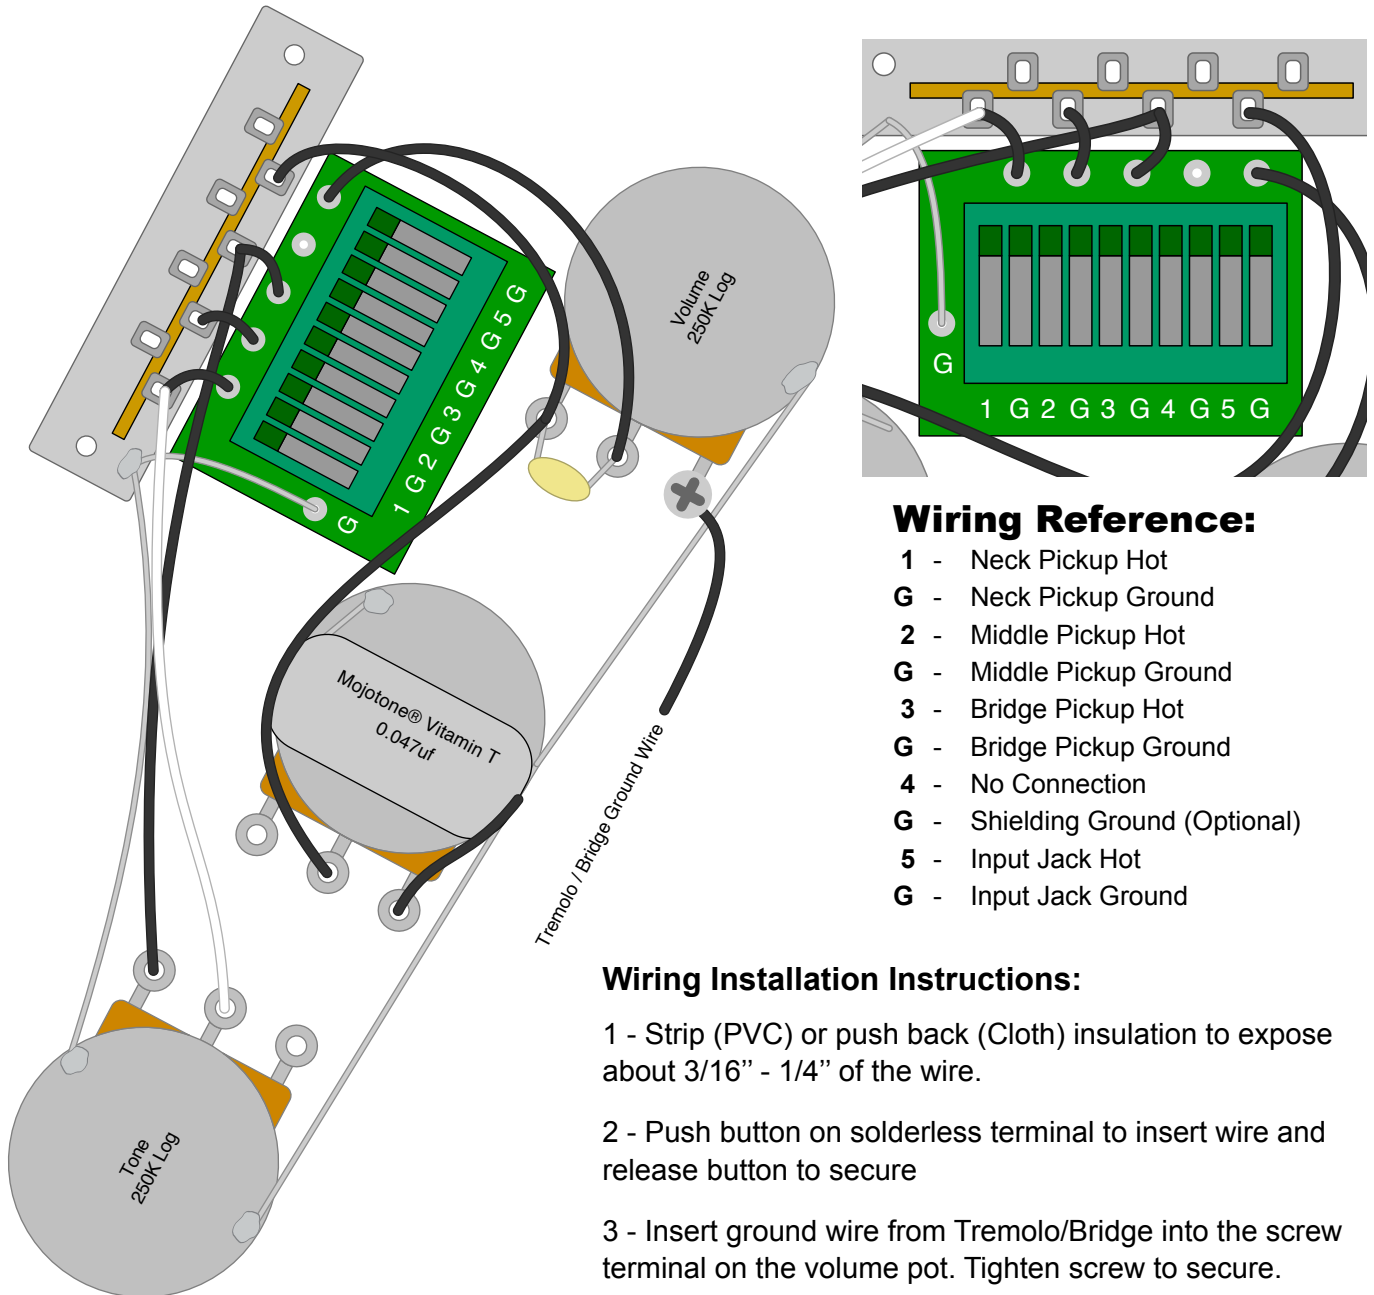

Wiring Reference:

- 1 - Neck Pickup Hot
- G - Neck Pickup Ground
- 2 - Middle Pickup Hot
- G - Middle Pickup Ground
- 3 - Bridge Pickup Hot
- G - Bridge Pickup Ground
- 4 - No Connection
- G - Shielding Ground (Optional)
- 5 - Input Jack Hot
- G - Input Jack Ground

Wiring Installation Instructions:

- 1 - Strip (PVC) or push back (Cloth) insulation to expose about 3/16" - 1/4" of the wire.
- 2 - Push button on solderless terminal to insert wire and release button to secure
- 3 - Insert ground wire from Tremolo/Bridge into the screw terminal on the volume pot. Tighten screw to secure.
- 4 - Plug in and test everything before final installation.