

## QUICK INSTALLATION:

1. Using a Phillips head screwdriver, loosen the cork padded mounting clamps on each side until the clamps are fully open. Insert the pickup into the soundhole from the treble side and grab the pickup with your other hand on the bass side to position the pickup into place. You want the pickup to be as close to the neck as possible. Center the logo under the strings. Tighten the clamps gently until the pickup is secure while leaving the cable out of the soundhole.

**CAUTION:** Do not overtighten the clamps as it may cause damage to the pickup or the guitar.

2. Install the included clip around the knurled portion of the barrel sleeve on the endpin jack if you don't want to permanently install the jack into the guitar. The clip can be used to attach the jack to your belt or guitar strap to relieve the cable from stress while plugged in.



## PERMANET INSTALLATION:

1. Remove the strings from the guitar. Drill a 1/2" hole through the tailblock or use a tapered reamer to enlarge the existing hole.

**CAUTION:** This step should only be performed by an experienced professional!



- 2 Remove the strap button, small hex nut, and small dress washer from the smaller threaded portion of the endpin jack to allow the larger threaded barrel portion to pass through the hole from the inside of the guitar.



3. Adjust the length of the larger threaded barrel by moving the large hex nut along with the dress washer and star washer until the smaller portion of the threaded barrel fully extends through the tailblock. It should extend no more than 11/32" (8.7mm) or a minimum of 5/16" (7.9mm) outside of the guitar.



4. While holding the endpin jack from the inside of the guitar, install the smaller dress washer followed by the smaller hex nut on the outside where the jack is protruding from the guitar.



5. Using a small screwdriver or hex wrench through the hole of the endpin jack, hold the jack in place while tightening the hex nut with an open end 1/2" wrench or adjustable pliers.




6. Install the strap button and tighten with pliers using rubber or leather to protect the strap button.

**NOTE:** The end of the jack should be perfectly flush or slightly protrude past the strap button or the plug may not fully click into the jack.



7. Install the 2 self-adhesive wire clips to the inside of the guitar and hook the pickup lead wire into the bendable tabs securely out of the way. Preferably on the inside waist of the guitar.

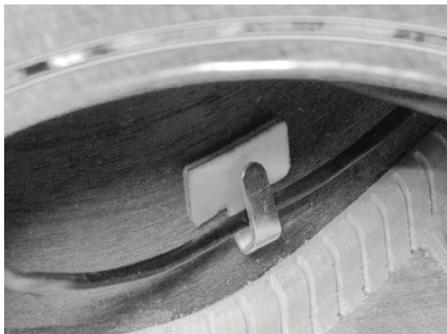

8. Using a Phillips head screwdriver, loosen the cork padded mounting clamps on each side until the clamps are fully open and insert the pickup into the soundhole. You want the pickup to be as close to the neck as possible. Tighten the clamps gently until the pickup is secure. String the guitar and adjust the pickup as needed centering the logo under the strings.

